

Year 2018

Installation Manual

CF Moto 850

VER 1.0




Before you start any work with the exhaust system make sure  
you let the bike cool down so you dont risk to injury  
yourself




**Stage 1** - Remove the factory heatshield that is installed on the right side right behind the right shock see picture.



**Stage 2** - Remove the bolts holding the flange and springs in place see picture below

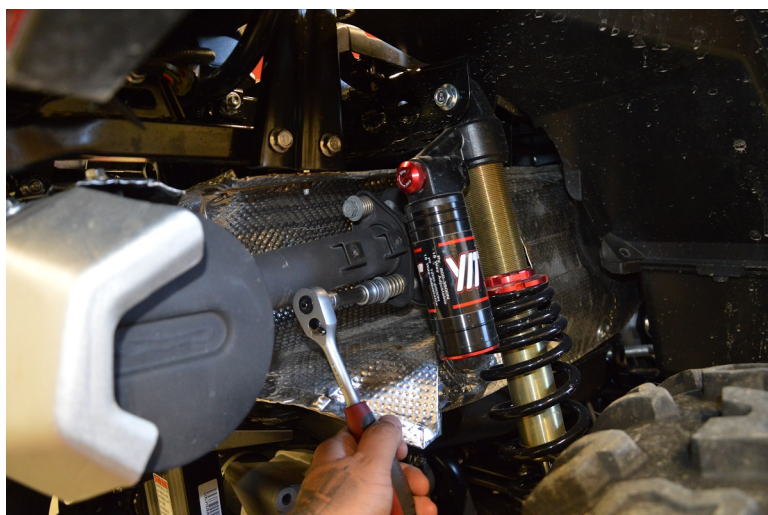

**Stage 3** - Remove the left side muffler hanger. This one is not being re-installed for the new exhaust . See picture attached.


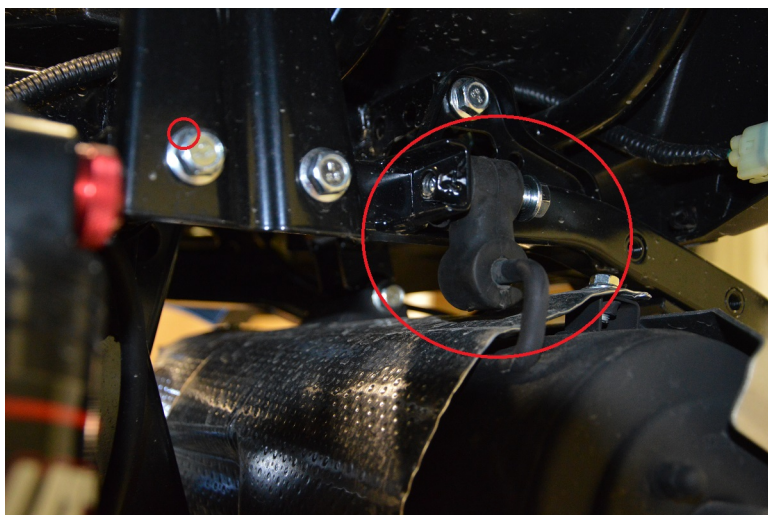


**Stage 4** - Loosen the bolt and nut holding the main muffler bracket in place see picture attached.




**Stage 5** - Remove the factory muffler IMPORTANT is to be careful with the small graphite packings that is placed on each side of the hanger in the frame. These are being re-used for the new rjwc slipon

**Stage 6** - Remove the factory gasket see picture below and replace it with the new rjwc gasket this is an important step to get a perfect seal between the header and slipon.

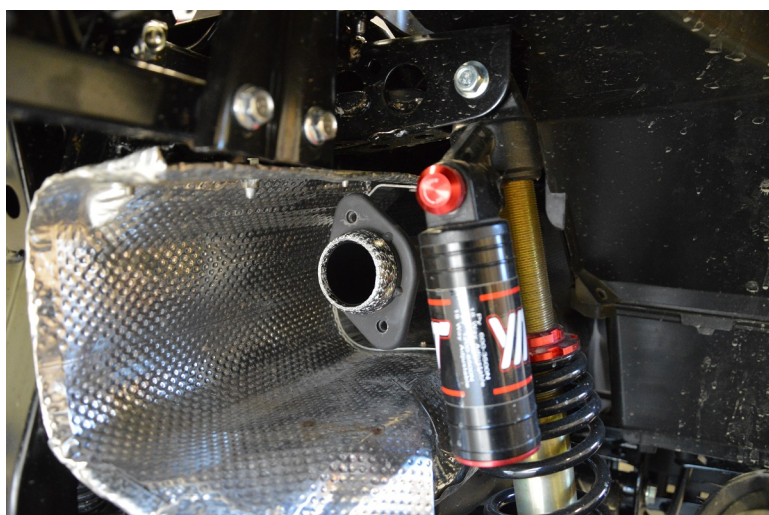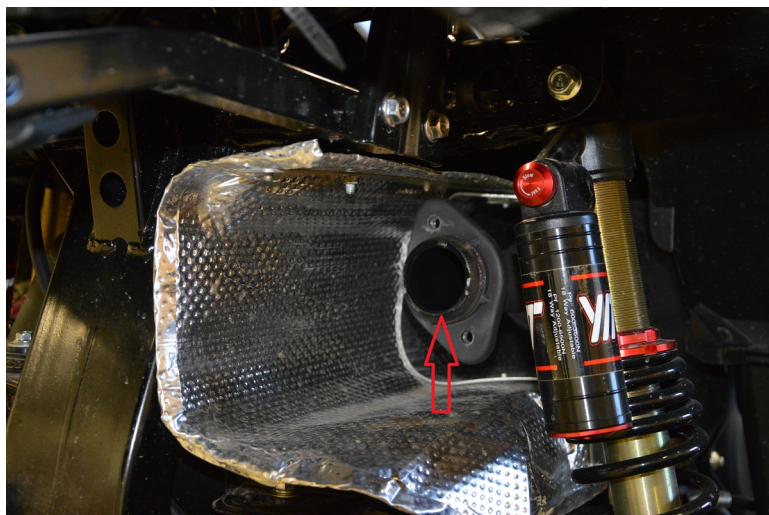

**Stage 7** - Install the new rjwc muffler start by installing the bolt holding the hanger on top of the muffler first. Make sure you install it as the picture below shows.

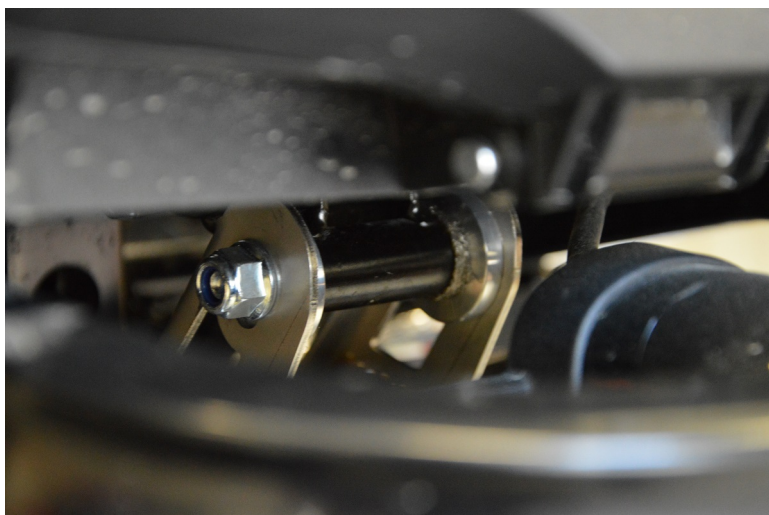

**Stage 8** - Install the bolts and springs that holds the flange towards the header and tighten them until the bolts bottoms out. Do NOT overtighten these. See picture attached.



You are now done with the installation of your next rjwc exhaust. Make sure you let the bike idle for 10 minutes and get hot. Then re-tighten all the bolts including the bolts holding the billet endtip in place (4 bolts)

RJ Weld & Custom AB Bullerleden 9  
961 67 BODEN, SWEDEN  
[www.rjweldcustom.se](http://www.rjweldcustom.se)

